Please read and save these instructions. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Retain instructions for future reference.



Electric Pressure Washer

Specifications

Model		Maximum Pressure	Maximum			Amperage	Unit Weight
PW1600	2400	1600 psi	1.5 GPM	100°F	120V	14 Amps	22 lbs.



Safety Guidelines

This manual contains information that is very important to know and understand. This information is provided for SAFETY and to PREVENT EQUIPMENT PROBLEMS. To help recognize this information, observe the following symbols.

AWARNING

Awardous situation which, if not avoided, COULD result in death or serious injury.

ACAUTION Caution indicates a potentially

hazardous situation which, if not avoided, MAY result in minor or moderate injury.

NOTE or NOTICE: Information that requires special attention.

Notes

Notas

Notes

! IMPORTANT!

This pressure washer is equipped with a microswitch sensitive to water flow. This Instant Start/Stop switch (ISS) senses water flow in the pump. When the trigger is released, water stops flowing through the pump. The ISS then automatically turns the motor off to protect pump from overheating.

OPERATION

- 1. Pull trigger on gun.
- 2. Turn the "ON/OFF" switch to "ON".
- 3. Release trigger. The pressure washer motor will stop running.
- 4. To spray again, pull trigger and motor and pump will restart.

Note: Occasionally the motor may run for a short time to bring fresh, cool water into the pump even if trigger is released. This is part of normal operation and will not damage the unit.

ACAUTION

Always turn the "ON/OFF" switch

to "OFF" then trigger gun to release hose pressure before unplugging power cord.

ACAUTION

Risk of equipment damage. Always

make sure the "ON/OFF" switch on the unit is "OFF" and unit is unplugged prior to storage.

AWARNING

Risk of Injection. Unit will start

spraying when trigger is squeezed if ON/OFF switch is in "ON" position. Always point gun in safe direction.

Call 1-800-330-0712 for Technical Service

Important Safety Instructions

SAVE THESE INSTRUCTIONS

AWARNING

When using this product, basic precautions should always be followed, including the following:

- 1. Read all instructions before using the product.
- 2. ALWAYS disconnect power before disassembling or repairing the unit.
- Follow all safety codes as well as the Occupational Safety and Health Act (OSHA).
- Ensure safety devices are operating properly before each use. DO NOT remove or modify any part of the gun or unit.
- Know how to stop this product and bleed pressure quickly. Be thoroughly familiar with the controls.
- 6. Stay alert watch what you are doing.
- 7. Do not operate the product when fatigued or under the influence of alcohol or drugs.
- 8. Keep operation area clear of all persons.
- Do not overreach or stand on unstable support. Keep good footing and balance at all times.
- 10. Follow the maintenance instructions specified in the manual.
- 11. This product is provided with a ground fault circuit interrupter, GFCI, be sure to inspect cord and GFCI prior to use. Any repair or replacement of the power cord must be performed by a qualified (licensed or certified) electrical technician.
- 12. Never use an extension cord with this product.

Notas			

Operating Instructions and Parts List

Garantía Limitada

- 1. DURACIÓN : A partir de la fecha de compra por parte del comprador original del modo siguiente : Un año.
- QUIÉN OTORGA ESTA GARANTÍA (GARANTE): Campbell Hausfeld / Scott Fetzer Company, 100 Mundy Memorial Drive. Mt. Juliet. TN. 37122. Teléfono: (800) 330-0712
- QUIÉN RECIBE ESTA GARANTÍA (COMPRADOR): El comprador original (sin fines de reventa) de la lavadora a presión Campbell Hausfeld.
- 4. QUÉ PRODUCTOS ESTÁN CUBIERTOS POR ESTA GARANTÍA: Toda lavadora a presión Campbell Hausfeld proporcionada o fabricada por el Garante.
- 5. QUÉ ESTÁ CUBIERTO POR ESTA GARANTÍA: Defectos importantes en el material y en la mano de obra que ocurran durante la duración del período de garantía con las excepciones que se detallan a continuación. La garantía cubre también los artículos de desgaste normal por un período de 90 días de la fecha de compra original contra defectos de material y mano de obra. Estos artículos de desgaste normal incluyen mangueras de alta presión, sellos de aqua y aceite, anillos en O, válvulas, lanzas y boquillas de rociado.
- 6. QUÉ NO ESTÁ CUBIERTO POR ESTA GARANTÍA:
 - A. Las garantías implícitas, incluyendo aquellas de comercialización y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTÁN LIMITADAS DESDE LA FECHA DE COMPRA ORIGINAL SEGÚN SE ESTABLECE EN LA DURACIÓN. Si esta lavadora a presión es empleada para uso comercial, industrial o alquiler, la garantía será aplicable durante 90 (noventa) días a partir de la fecha de compra. En algunos estados no se permiten las limitaciones a la duración de una garantía implícita, por lo cual las limitaciones antedichas pueden no ser aplicables en su caso.
 - B. CUALQUIER PÉRDIDA, DAÑO O GASTO INCIDENTAL, INDIRECTO O CONSECUENTE QUE PUEDA RESULTAR DE CUALQUIER DEFECTO, FALLA O MAL FUNCIONAMIENTO DE LA LAVADORA A PRESIÓN CAMPBELL HAUSFELD. En algunos estados no se permiten la exclusión ni la limitación de los daños incidentales o consecuentes, por lo cual la limitación o exclusión antedichas pueden no ser aplicables en su caso.
 - C. Cualquier fallo que sea el resultado de daños de envío, accidente, abuso, negligencia por parte del comprador o si éste no instala y hace funcionar la lavadora a presión de acuerdo con las instrucciones proporcionadas en el (los) manual(es) del propietario que se entrega(n) con el producto.
 - D. Servicio previo a la entrega, es decir, armado, aceite o lubricantes y ajuste.
 - E. Artículos o servicios que normalmente se necesitan para el mantenimiento de la lavadora a presión.
- F. El motor a gasolina y sus componentes que están expresamente excluidos de la cobertura según esta garantía limitada. Dichos componentes deben ser devueltos por el comprador al fabricante original o a sus estaciones de reparación autorizadas para servicio.
- G. Artículos adicionales no cubiertos por la garantía:
- 1. Cepillos del motor (solo modelos eléctricos).
- 2. Defectos estéticos que no interfieren con la funcionalidad.
- 3. Componentes oxidados.
- 4. Desgaste de la bomba o daños de las válvulas causados por el uso de un aceite inadecuado, contaminación del aceite o por no seguir las pautas de mantenimiento de lubricación adecuadas.
- 7. RESPONSABILIDAD DEL GARANTE EN VIRTUD DE ESTA GARANTÍA: Según elija el Garante, la reparación o el reemplazo de la lavadora a presión o los componentes que estén defectuosos, que hayan funcionado en forma inadecuada o que no hayan cumplido con su función dentro de la duración del período de la garantía.
- 8. RESPONSABILIDAD DEL COMPRADOR EN VIRTUD DE ESTA GARANTÍA:
 - A. Proporcionar comprobante de compra fechado y registros de mantenimiento.
 - B. Entregar o enviar la lavadora a presión o el componente Campbell Hausfeld al Centro de servicio autorizado Campbell Hausfeld más cercano. Los costos de flete, si los hubiera, correrán por cuenta del comprador.
 - C. Emplear un cuidado razonable para el manejo y el mantenimiento de la lavadora a presión, según se describe en el (los) manual(es) del propietario.
- 9. EN QUÉ CASOS EL GARANTE PROPORCIONARÁ REPARACIÓN O REEMPLAZO EN VIRTUD DE ESTA GARANTÍA: La reparación o el reemplazo serán establecerán y se llevarán a cabo de acuerdo con el flujo de trabajo normal en la instalación de servicio, y dependerá de la disponibilidad de piezas de repuesto.

Esta garantía limitada se aplica únicamente en los EE.UU., Canadá y México, y le proporciona derechos legales específicos. Puede que también tenga otros derechos que pueden variar de un estado a otro, o de un país a otro.

- 13. The power cord on this product contains chemicals, including lead, known to the State of California to cause [cancer and] birth defects or other reproductive harm. Wash hands after handling.
- To reduce the risk of injury, close supervision is necessary when a product is used near children.

AWARNING

Risk of electrocution

- Inspect cord before using Do not use if cord is damaged.
- Keep all electrical connections dry and off the ground.
- Do not touch plug with wet hands.
- This product is provided with a ground fault circuit interrupter built into the power cord plug. If replacement of the plug or cord is needed, use only identical replacement parts.
- Do not spray electrical apparatus and wiring.

AWARNING

Risk of injection or sever injury

- High pressure. Keep clear of nozzle. Do not discharge streams at persons or animals.
- Never put hand or fingers over spray tip while operating the unit.
- Never try to stop or deflect leaks with any body part.
- Always engage the trigger safety latch in the safe position when spraying is stopped even if only for a few moments.
- Point gun in safe direction. Unit will start spraying when trigger is squeezed if "on/off" switch is in "ON" position.

 Discharge pressure – When 'on/off' switch is in "off" position, pressure may still exist in unit. To discharge pressure, point gun is safe direction and squeeze trigger.

AWARNING

Risk of explosion

- Do not spray flammable liquids.
- Never use in areas containing combustible dust, liquids, or vapors.

ACAUTION

- High pressure Gun kicks back Hold gun with both hands.
- Keep hose away from sharp objects.
 Bursting hoses may cause injury.
 Examine hose regularly and replace if damaged. Do not attempt to mend a damaged hose.

NOTICE

- Use only detergents specifically formulated for pressure washers. Always follow detergent manufacturer's label recommendations for proper use of detergents. Always protect eyes, skin, and respiratory system from detergent.
- For either indoor or outdoor use. Store indoors and where temperature stays above freezing.
- Unplug unit when not in use.
- Pressure washer is not meant to pump hot water. Do not connect to hot water supply.
- Never leave the unit unattended while it is plugged in.
- Always turn water supply "ON" before turning pressure washer "ON." Running pump dry causes damage.

Servicing of a Double-Insulated Appliance

In a double-insulated product, two systems of insulation are provided instead of grounding. No grounding means are provided for a double-insulated product, nor should grounding means be added to the product. Servicing a double-insulated product requires extreme care and knowledge of the system, and should be done only by qualified service personnel. Replacement parts for a double-insulated product must be identical to the original parts. A double-insulated product is marked with the words "Double Insulation" or "Double Insulated." Product may also be marked with symbol shown below.



Double Insulated symbol

AWARNING

Do not use pressure that exceeds the operating pressure of any of the parts (hoses, fittings, etc.) in the pressurized system. Ensure all equipment and accessories are rated to withstand the maximum working pressure of the unit.

AWARNING Explosion hazard.

- NEVER spray flammable liquids or use pressure washer in areas containing combustible dust, liquids or vapors.
- Never operate this machine in a closed building or in or near an explosive environment

AWARNING Do not spray electrical apparatus and wiring.

- Never disconnect the high pressure discharge hose from the machine while the system is pressurized. To depressurize machine, turn power and water supply off, then press gun trigger 2-3 times.
- Never permanently engage the trigger mechanism on the gun.
- Never operate the machine without all components properly connected to the machine (handle, gun/wand assembly, nozzle, etc.).

AWARNING Equipment damage.

- ALWAYS turn water supply "ON" before turning pressure washer "ON." Running pump dry causes serious damage.
- Do not operate the pressure washer with the inlet water screen removed. Keep screen clear of debris and sediment.
- NEVER operate pressure washer with broken or missing parts. Check equipment regularly and repair or replace worn or damaged parts immediately.
- Use only the nozzle supplied with this machine.
- Never leave the wand unattended while the machine is running.
- Never attempt to alter factory settings.
 Altering factory settings could damage the unit and will void the warranty.
- Always hold gun and wand firmly when starting and operating the machine.
- NEVER allow the unit to run with the trigger released (off) for more than one (1) minute. Resulting heat buildup will damage pump.


Lista de Repuestos

Para Ordenar Repuestos o Asistencia Técnica, sírvase llamer al 1-800-330-0712 (En los Estados Unidos, o llame a su distribuidor local)


Sírvase proporcionar la siguiente información:

- Número de modelo
- Número de serie (si lo hubiera)
- Descripción y número del repuesto, según se indica en la lista de repuestos.

Dirija toda la correspondencia a: Campbell Hausfeld Attn: Customer Service 100 Mundy Memorial Drive Mt. Juliet, TN 37122 U.S.A.

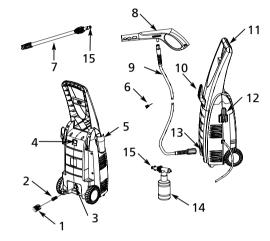

No. de Ref.	Descripción	Número del Repuesto	Ctd.
1	Adaptador de pivote	PM350100SV	1
2	Filtro	PM350101SV	1
3	Entrada	N/A	1
4	Interruptor	N/A	1
5	Soporte de la pistola	PM350111SV	1
6	Limpiador de puntas	PM008500AV	1
7	Lanza de rociado en abanico ajustable	PM350104SV	1
8	Pistola	PM350109SV	1
9	Manguera	PM350110SV	1
10	Soporte para la manguera	PM350112SV	1
11	Mango	PM350114SV	1
12	Soporte del cable eléctrico	PM350113SV	1
13	Salida	N/A	1
14	Botella para detergente	PM350105AV	1
15	Anillo en O	PM232200SV	3

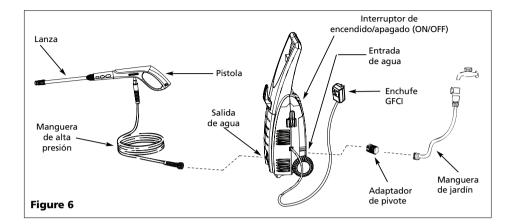

Notas		

- Pressure washer is not meant to pump hot water. NEVER connect it to a hot water supply as it will significantly reduce the life of the pump.
- NEVER store the pressure washer outdoors or where it could freeze. The pump will be seriously damaged.
- Release trigger when changing from high to low pressure modes. Failure to do so could result in damage

ACAUTION

Keep hose away from sharp objects. Bursting hoses may cause injury. Examine hoses regularly and replace if damaged. Do not attempt to mend a damaged hose.

Garden Hose Connection Instructions

- Attach swivel adapter to pump water inlet, if not already attached. Notice the swivel adapter is marked with the words pump and hose. Make sure to connect pump side of adapter to pump water inlet to prevent damage to the threads.
- 2. Attach garden hose to swivel adapter side marked hose.

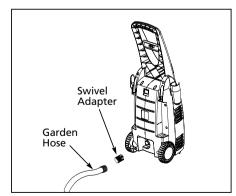


Figure 2 - Garden Hose Connection

3. The spray gun should be locked into the "OFF" position by locating the safety trigger lock just above the trigger of the gun. Activate the lock by holding the gun and push the lock from left to right. Squeeze trigger to make sure the trigger does not move. The safety trigger lock should be locked at all times when pressure washer is not in use.

Power Cord

- Plug the power cord into a grounded 120V outlet and press the reset button as shown in Figure 3.
- 2. THIS MUST BE DONE EACH TIME THE UNIT IS PLUGGED IN AN OUTLET.

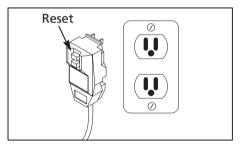


Figure 3 - Grounded plug/reset button

System Connection

 Insert lance into the gun and turn clockwise to positive stop as shown in Figure 4.




Figure 4 - Gun/Lance Connection

- Attach the high pressure hose onto the gun by turning clockwise and tighten with a wrench.
- 3. Be sure that the power switch is in the "OFF" position.
- 4. Attach the high pressure hose onto the pump water outlet by turning clockwise and hand tightening.
- 5. Connect garden hose as explained under **Garden Hose Connection Instructions**.
- 6. Plug the power cord into a grounded 120V outlet.
- 7. Turn water on.
- 8. Unlock trigger lock by moving lock right to left.
- Depress and hold the trigger on the gun for one minute to release pressure and remove any air trapped in the system.
- 10.Turn the "ON/OFF" switch to the "ON" position.

How to Avoid Damaging Surfaces

Directions for Use

Damage to cleaning surfaces occurs because the impact force of the water exceeds the durability of the surface. You can vary the impact force by controlling the nozzle's fan pattern, the nozzle's angle to the cleaning surface, and the nozzle's distance from the cleaning surface. Never use a narrow high impact stream or a turbo nozzle on a surface that is susceptible to damage. Avoid spraying windows with a narrow high impact stream or turbo nozzle. Doing so may break the window. The surest way to avoid damaging surfaces is to follow these steps:

- 1. Before triggering the gun, adjust the nozzle to a wide fan pattern.
- Place the nozzle approximately
 4-5 feet away from the cleaning
 surface. Then hold the nozzle at a 45°
 angle to the cleaning surface. Trigger
 the gun.
- Vary the fan pattern spray angle and the distance to the cleaning surface until optimum cleaning efficiency is achieved without damaging the surface.

Nozzle Cleaning Instructions

A clogged or partially clogged nozzle can cause a significant reduction of water coming out of the nozzle and cause the unit to pulsate while spraying.

To clean out the nozzle:

- Turn off unit.
- Turn off water supply. Relieve any pressure trapped in the hose by squeezing trigger 2-3 times.

DETERGENTES

El uso de detergentes puede reducir radicalmente el tiempo de limpieza y ayudar a eliminar las manchas resistentes. Algunos detergentes han sido diseñados específicamente para usar con lavadoras a presión en tareas de limpieza específicas. Estos detergentes tienen una densidad aproximadamente igual a la del agua. El uso de detergentes más espesos, como jabón para vajilla, obstruirá el sistema de inyección de productos químicos y evitará la aplicación del detergente.

La potencia de limpieza de los detergentes depende de su aplicación a una superficie y el tiempo de espera para que los productos químicos actúen sobre la suciedad y el tizne. Los detergentes funcionan mejor cuando se aplican a baja presión.

La combinación de la acción de los productos químicos y el enjuague de alta presión es muy eficaz. En superficies verticales, aplique el detergente comenzando desde abajo y avanzando hacia arriba. Esto evitará que el detergente se escurra hacia abajo dejando marcas. El enjuague de alta presión también se debe realizar desde abajo hacia arriba. En manchas particularmente resistentes, puede ser necesario usar un cepillo conjuntamente con los detergentes y el enjuague de alta presión.

Operación

- Durante el funcionamiento, la presión afecta la lanza: téngala firmemente con ambas manos y apunte la boquilla hacia el suelo.
- 2. Accione jalando el gatillo de la pistola pulverizadora/mango.
- 3. Ajuste la distancia de la superficie a limpiar, lo cual actúa también sobre la presión de la boquilla.
- Refiérase al manual del producto para el funcionamiento, la limpieza de la superficie, y cómo evitar daños a las superficies y otros asuntos.




Figura 5 - Ajuste de pulverización

CONCLUSIÓN DEL TRABAJO

- Presione el interruptor ON/OFF de la lavadora de presión en la posición "OFF".
- 2. Desconecte el enchufe del suministro de corriente.
- 3. Cierre el suministro de agua.
- 4. Accione el mango pulverizador para aliviar la presión de la máquina.
- 5. Trabe el gatillo en la posición "OFF".

CÓMO EVITAR DAÑAR LAS SUPERFICIES

Instrucciones de uso

El daño a las superficies de limpieza ocurre porque la fuerza de impacto del agua supera la durabilidad de la superficie. Puede variar la fuerza de impacto controlando el patrón en abanico de la boquilla, el ángulo de la boquilla con respecto a la superficie de limpieza y la distancia entre la boquilla v la superficie de limpieza. Nunca utilice un chorro angosto de alto impacto ni una boquilla turbo sobre una superficie propensa a ser dañada. Evite rociar las ventanas con un chorro angosto de alto impacto o con una boquilla turbo. Hacer esto puede quebrar la ventana. La forma más segura de evitar daños a las superficies es seguir estos pasos:

- Antes de apretar el gatillo, ajuste la boquilla en un patrón en abanico amplio.
- 2. Coloque la boquilla aproximadamente a 4-5 pies de distancia de la superficie de limpieza. Luego sostenga la boquilla en un ángulo de 45° grados con respecto a la superficie de limpieza. Dispare la pistola.
- Varíe el ángulo de rociado del patrón en abanico y la distancia a la superficie de limpieza hasta lograr una óptima eficiencia de limpieza sin dañar la superficie.

INSTRUCCIONES PARA LIMPIAR LA BOQUILLA

Una boquilla obstruida o parcialmente obstruida puede provocar una reducción significativa del agua que sale por la boquilla y hacer que la unidad vibre al rociar.

Para limpiar la boquilla:

- Apague la unidad.
- Cierre el suministro de agua. Libere toda la presión atrapada en la manguera apretando el gatillo 2 ó 3 veces.
- Ouite la lanza de la pistola.
- Gire la boquilla a la posición de chorro angosto. Esto abre las paletas de la turbina.
- Usando el limpiador de puntas que se incluye, o un sujetador de papeles desdoblado, introduzca el alambre en el orificio de la boquilla y muévalo hacia adelante y hacia atrás hasta quitar la obstrucción (vea la figura 5).
- Quite las obstrucciones adicionales pasando agua en dirección inversa a través de la boquilla. Para hacer eso, quite la boquilla de la pistola, ponga un extremo de la manguera de jardín (con el agua abierta) en la punta de la boquilla para expulsar agua y residuos por el orificio trasero de la lanza.




Figure 5

Nozzle Cleaning Instructions (Continued)

- Separate lance from gun.
- Rotate nozzle to the narrow stream setting. This opens up the fan blades.
- Using the included tip cleaner, or an un-folded paper clip, insert wire into the nozzle hole and move back and forth until debris is dislodged (refer to Figure 5).




Figure 5


 Remove additional debris by backflushing water through the nozzle. To do this, remove the lance from the gun, place end of a garden hose (with water running) to tip of nozzle pushing water and debris out the back opening of the lance.

Detergents

The use of detergents can dramatically reduce cleaning time and assist in the removal of difficult stains. Some detergents have been customized for pressure washer use on specific cleaning tasks. These detergents are approximately as thick as water. The use of thicker detergents, such as dish soap, will clog the chemical injection system and prevent the application of the detergent.

The cleaning power of detergents comes from applying them to a surface and giving the chemicals time to break down the dirt and grime. Detergents work best when applied at low pressure.

The combination of chemical action and high pressure rinsing is very effective. On vertical surfaces, apply the detergent starting at the bottom and work your way upward. This will prevent the detergent from sliding down and causing streaks. High pressure rinsing should also progress from the bottom to top. On particularly tough stains, it may be necessary to use a brush in combination with detergents and high pressure rinsing.

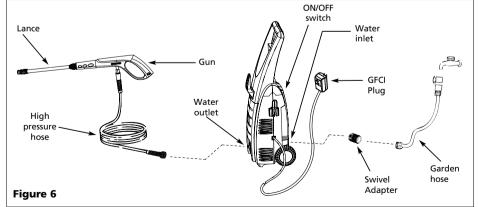

Operation

- The lance is affected by pressure during operation; therefore hold it firmly with both hands and point the nozzle toward the ground.
- 2. Activate by pulling the trigger of the gun/spray handle.
- 3. Adjust the distance to the cleaning surface, which will also adjust your pressure of the nozzle.
- 4. Spray pattern shape and intensity can be changed by twisting the spray adjuster at the end of the lance. Keep hands clear of the front of the lance to prevent injury. See figure 7.




Figure 7 - Spray Adjust

rigure 7 - Spray Aujus	•		
Notes			
		 ·	

8

END OF OPERATION

- 1. Press the ON/OFF switch to "OFF" on the pressure washer.
- 2. Disconnect the plug from the power source.
- 3. Shut off the water supply.
- 4. Activate the spray handle to relieve the machine of pressure.
- 5. Lock the trigger into the "OFF" position.

Cable de Corriente Eléctrica

 Enchufe el cable de corriente eléctrica a un tomacorriente con tierra de 120V y presione el botón de reposición como se muestra en la Figura 3.

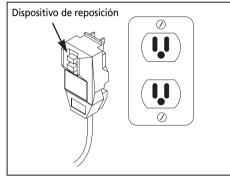


Figura 3 - Enchufe con tierra/botón de reposición

 SE DEBE HACER ESTO CADA VEZ QUE LA UNIDAD SE ENCHUFE EN UN TOMACORRIENTE.

Conexión del Sistema

 Inserte la lanza en la pistola y gírela en el sentido de las agujas del reloj hasta que llegue a su tope, como se muestra en la Figura 4.




Figura 4 - Conexión de la pistola y lanza

- Conecte la manguera de alta presión a la pistola girando en sentido horario y apriete con una llave.
- 3. Verifique que el interruptor esté en la posición "OFF" ("APAGADO").
- Conecte la manguera de alta presión al orificio de salida del agua de la bomba girando en sentido horario y apretando a mano.
- 5. Conecte la manguera de jardín según se explica en Instrucciones de conexión de la manguera de jardín.
- Enchufe el cordón de corriente en un tomacorrientes de 120 V con conexión a tierra.
- 7. Abra la llave del agua.
- 8. Suelte el cierre del gatillo deslizando el cierre de la derecha a la izquierda.
- 9. Oprima el gatillo y manténgalo presionado por 1 minuto para liberar la presión y liberar el aire atrapado en el sistema.
- 10.Coloque el interruptor "ON/OFF" ("ENCENDIDO/APAGADO") en la posición "ON" ("ENCENDIDO").

www.chpower.com

29 Sp

PARA REPARAR UN **APARATO DE DOBLE** AISLAMIENTO (Continuación)

- Use solamente la boquilla suministrada con esta máquina.
- Nunca deie la lanza sola mientras la máquina esté funcionando.
- Nunca intente alterar los ajustes de fábrica. La alteración de los ajustes de fábrica podría dañar la unidad y anulará la garantía.
- Siempre sujete firmemente la pistola y lanza cuando inicie el funcionamiento v opere la máquina.
- NUNCA permita que la unidad funcione por más de un (1) minuto con el gatillo suelto (off). El calor producido durante ese tipo de funcionamiento dañará la bomba.
- La lavadora a presión no está diseñada para bombear agua caliente. NUNCA la conecte a un suministro de agua caliente ya que reduciría significativamente la vida de la bomba.
- NUNCA guarde la hidrolavadora a la intemperie o donde se pueda congelar. La bomba se dañaría seriamente.
- Suelte el gatillo cuando vaya a cambiar de alta a baja presión. De no hacerlo podría dañar la boquilla.

APRECAUCION

Mantenga la manguera lejos de objetos filudos. Las mangueras que se revientan pueden ocasionar lesiones. Examine las mangueras con regularidad y cámbielas si están dañadas. No intente reparar una manguera dañada.

Conexión de la Manguera de Jardín

- 1. Conecte el adaptador de pivote al orificio de entrada de aqua de la bomba, si ya no está conectado. Fíjese que el adaptador de pivote está marcado con las palabras "pump" (bomba) v "hose" (manguera). Asegúrese de conectar el lado de la bomba del adaptador al orificio de entrada de agua de la bomba para prevenir un daño a la rosca.
- 2. Conecte la manguera de jardín al lado del adaptador de pivote marcado con "hose" (manguera).
- 3. La pistola pulverizadora debe estar trabada en la posición "OFF" (apagado) por medio del cierre de seguridad del gatillo ubicado arriba del gatillo de la pistola. Accione el cierre teniendo la pistola v empuiando el cierre de la izquierda a la derecha. Apriete el gatillo para asegurarse que el mismo no se mueva. El cierre de seguridad del gatillo debe guedar siempre trabado cuando la lavadora de presión no se esté usando.



Figura 2 - Conexión de la manguera de jardín


Replacement Parts List

For Replacement Parts or Technical Assistance, Call 1-800-330-0712

Please provide following information:

- Model number
- Serial number (if any)
- Part description and number as shown in parts list

Address parts correspondence to: Campbell Hausfeld Attn: Customer Service 100 Mundy Memorial Drive Mt. Juliet, TN 37122 U.S.A.

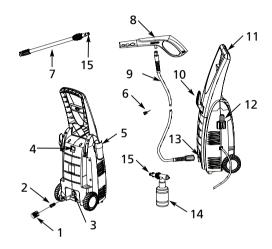

Ref. No.	Description	Part Number	Qty.
1	Swivel Adapter	PM350100SV	1
2	Filter	PM350101SV	1
3	Pump Inlet	N/A	1
4	Switch	N/A	1
5	Gun Holder	PM350111SV	1
6	Tip Cleaner	PM008500AV	1
7	Adjustable Fan Lance	PM350104SV	1
8	Gun	PM350109SV	1
9	Hose	PM350110SV	1
10	Hose Holder	PM350112SV	1
11	Handle	PM350114SV	1
12	Power Cord Holder	PM350113SV	1
13	Pump Outlet	N/A	1
14	Detergent Bottle	PM350105AV	1
15	O-Ring	PM232200SV	2

28 Sp www.chpower.com 9

Limited Warranty

- 1. DURATION: From the date of purchase by the original purchaser as follows: One Year.
- 2. WHO GIVES THIS WARRANTY (WARRANTOR): Campbell Hausfeld / Scott Fetzer Company, 100 Mundy Memorial Drive, Mt. Juliet, TN. 37122, Telephone: (800) 330-0712
- 3. WHO RECEIVES THIS WARRANTY (PURCHASER): The original purchaser (other than for purposes of resale) of the Campbell Hausfeld pressure washer.
- 4. WHAT PRODUCTS ARE COVERED UNDER THIS WARRANTY: Any Campbell Hausfeld Pressure Washer supplied or manufactured by the Warrantor.
- 5. WHAT IS COVERED UNDER THIS WARRANTY: Substantial defects on material and workmanship which occur within the duration of the warranty period with the exceptions noted below. Warrantor will also cover normal wear items for a period of 90 days from the date of original purchase against defects in material and workmanship. These wear items include high pressure hoses, water and oil seals, o-rings, valves, lances, and spray tips.
- 6. WHAT IS NOT COVERED UNDER THIS WARRANTY:
- A.Implied warranties, including those of merchantability and FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED FROM THE DATE OF ORIGINAL PURCHASE AS STATED IN THE DURATION. If this pressure washer is used for commercial, industrial or rental purposes, the warranty will apply for ninety (90) days from the date of purchase. Some States do not allow limitation on how long an implied warranty lasts, so the above limitations may not apply to you.
- B. ANY INCIDENTAL, INDIRECT, OR CONSEQUENTIAL LOSS, DAMAGE, OR EXPENSE THAT MAY RESULT FROM ANY DEFECT. FAILURE, OR MALFUNCTION OF THE CAMPBELL HAUSFELD PRESSURE WASHER. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.
- C. Any failure that results from shipping damage, accident, purchaser's abuse, neglect or failure to install and operate pressure washer in accordance with instructions provided in the owner's manual(s) supplied with product.
- D.Pre-delivery service, i.e. assembly, oil or lubricants and adjustment.
- E. Items or service normally required to maintain the pressure washer.
- F. Gasoline engine and components are expressly excluded from coverage under this limited warranty. Such components should be returned by the purchaser to the original manufacturer or to its authorized repair stations for service.
- G. Additional items not covered under the warranty:
- 1. Motor brushes (Electric models only).
- 2. Cosmetic defects that do not interfere with functionality.
- 3. Rusted components.
- 4. Pump wear or valve damage caused by using improper oil, oil contamination or by failure to follow proper oil maintenance quidelines.
- 7. RESPONSIBILITIES OF WARRANTOR UNDER THIS WARRANTY: Repair or replace, at Warrantor's option, pressure washer or component which is defective, has malfunctioned and/or failed to conform within duration of the warranty period.
- 8. RESPONSIBILITIES OF PURCHASER UNDER THIS WARRANTY:
- A. Provide dated proof of purchase and maintenance records.
- B. Deliver or ship the Campbell Hausfeld pressure washer or component to nearest Campbell Hausfeld Authorized Service Center. Freight costs, if any, must be borne by the purchaser.
- C. Use reasonable care in the operation and maintenance of the pressure washer as described in the owner's manual(s).
- 9. WHEN WARRANTOR WILL PERFORM REPAIR OR REPLACEMENT UNDER THIS WARRANTY: Repair or replacement will be scheduled and serviced according to the normal work flow at the servicing location, and depending on the availability of replacement parts.

This Limited Warranty applies in the U.S., Canada and Mexico only and gives you specific legal rights. You may also have other rights which vary from state to state or country to country.

FORMA DE REPARAR UN APARATO DE DOBLE AISLAMIENTO

Los productos de doble aislamiento contienen dos sistemas de aislamiento en lugar de una conexión a tierra. No hay forma de conectar a tierra un producto con doble aislamiento, ni se le debe instalar ninguna forma de hacerlo. La reparación de un producto con doble aislamiento requiere un gran cuidado y conocimiento del sistema y se debe hacer solamente por personal de servicio debidamente calificado. Las piezas de repuesto para un producto con doble aislamiento deben ser idénticas a las piezas que van a substituir. Un producto con doble aislamiento, fabricado en los Estados Unidos, está marcado con las palabras "DOUBLE INSULATION" (DOBLE AISLAMIENTO) o "DOUBLE INSULATED" (AISLADO DOBLEMENTE). El símbolo también puede estar marcado sobre el producto.



▲ ADVERTENCIA No aplique presiones

que excedan la presión de funcionamiento de ninguna de las partes (mangueras, acoples, etc...) del sistema de presión. Asegúrese de que todo el equipo y los accesorios estén clasificados para resistir la presión máxima de trabajo de la unidad.

AADVERTENCIA Peligro de Explosión.

- NUNCA rocíe líquidos inflamables, ni use la hidrolavadora en áreas donde hava residuos líquidos o vapores combustibles.
- Nunca opere esta máquina en un edificio cerrado o en un ambiente explosivo o cerca del mismo.

▲ADVERTENCIA No rocíe artefactos

ni alambres eléctricos.

- Nunca desconecte la manguera de descarga de alta presión de la máguina mientras el sistema esté presurizado. Para despresurizar la máquina, cierre los suministros de electricidad v aqua, v luego, presione 2-3 veces el gatillo de la pistola.
- Nunca enganche de manera permanente el mecanismo del gatillo de la pistola.
- Nunca opere la máquina sin que todos los componentes estén debidamente conectados a ella. (Mango, conjunto de pistola/vara, boquilla, etc.)

AADVERTENCIA DAÑOS EN EL

EOUIPO

- SIEMPRE abra el suministro de agua antes de la hidrolavadora. La operación de la bomba en seco causa daños muy serios.
- No opere la lavadora a presión con el filtro de la entrada de agua removido. Mantenga el filtro libre de basura y sedimento.
- NUNCA opere la lavadora a presión con piezas rotas o que faltan. Revise el equipo con regularidad y repare o cambie inmediatamente las piezas gastadas o dañadas.

www.chpower.com

10

27 Sp